


COMPULOCKS


Through Stand Cable Assembly


REMOVE FRONT COVER.

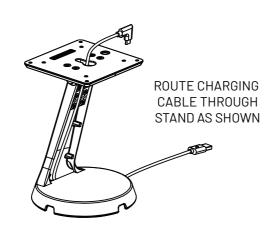

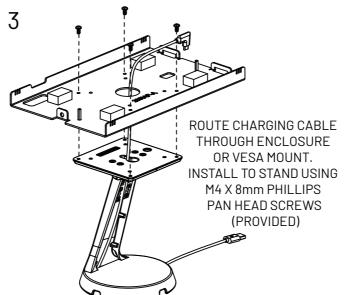

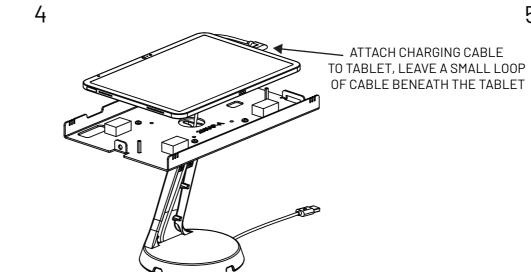

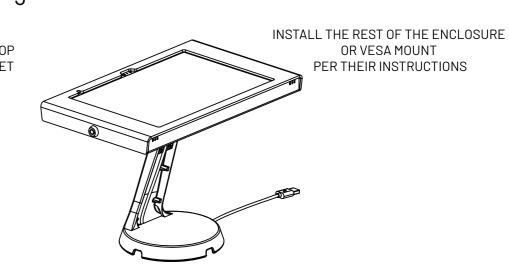


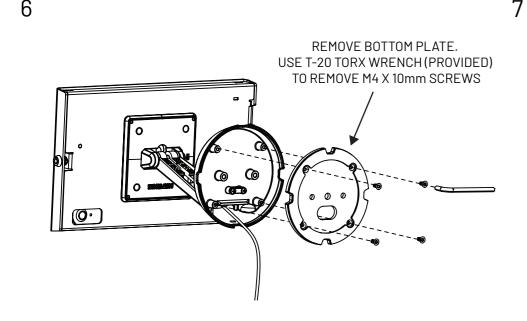



USE T-20 TORX WRENCH (PROVIDED)

TO REMOVE M4 X 10mm

TORX FLAT HEAD SCREWS

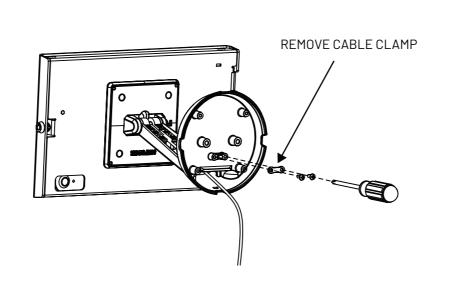


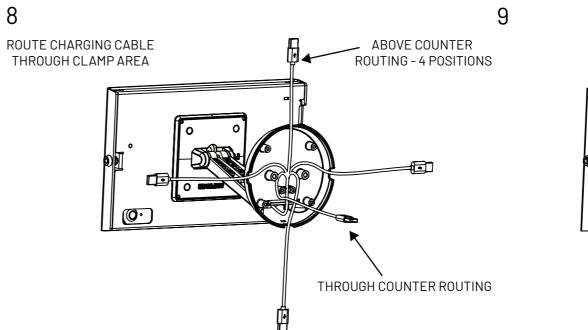

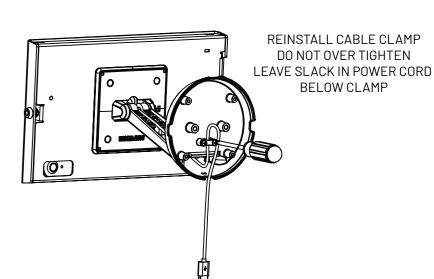

COMPULICKS


0

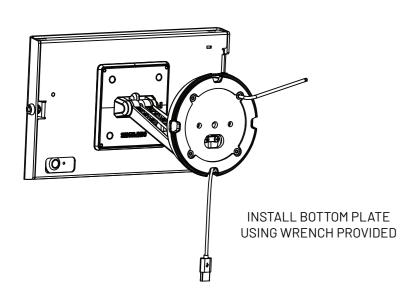


INSTALL FRONT COVER

USING WRENCH PROVIDED


Securing Stand Using Cable Lock

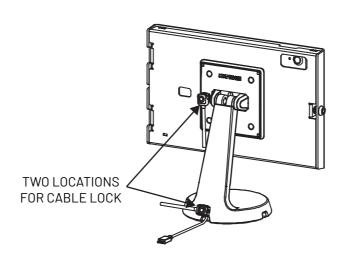



Tilt Tension Adjustment

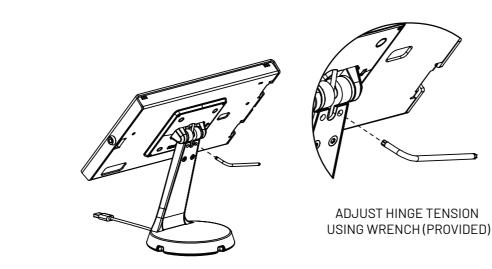

www.compulocks.com|online@maclocks.com|+1800-948-0344

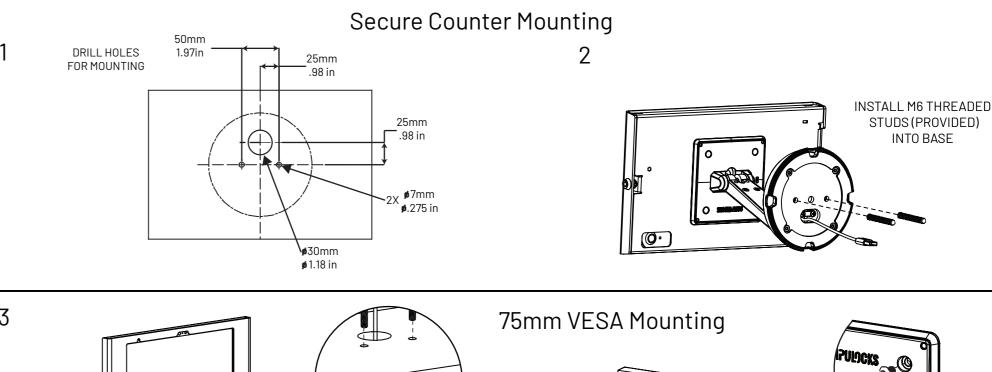

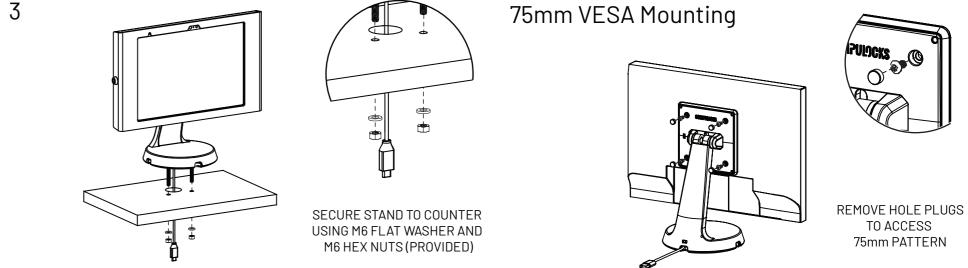











Hardware Kit

M6-1mm Hex Nut M4 X 8mm Phillips Pan Head Screw