



1 2

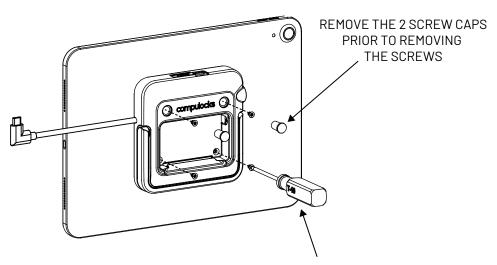




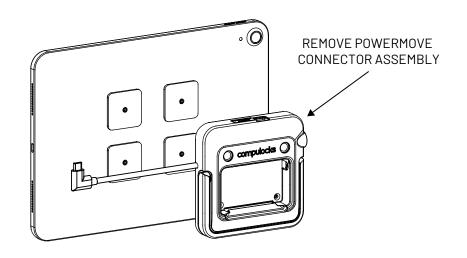

3

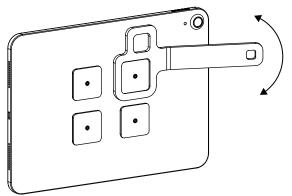

PLACE TABLET ON A FLAT PROTECTIVE SURFACE
WITH THE 4 ADHESIVE PADS FACING UP.
WHILE SECURELY HOLDING THE DEVICE,
PLACE THE REMOVAL TOOL* ONTO THE ADHESIVE
PAD AS SHOWN AND ROTATE WITH STEADY FORCE
ALLOWING THE ADHESIVE TO BREAK FREE. * sold separately

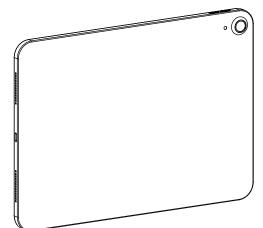


IF ANY ADHESIVE REMAINS ON THE DEVICE IT CAN BE REMOVED USING AN ADHESIVE REMOVAL SOLUTION COMPATIBLE WITH THE DEVICE. DO NOT USE SOLVENT

PowerMove VHB Kit SKU:PMVK01


Assembly Instructions

COMPULOCKS


5

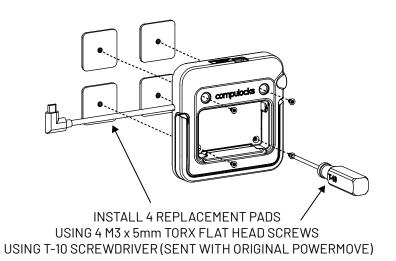

6

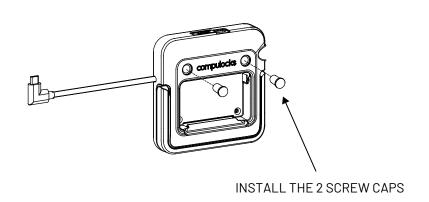

/

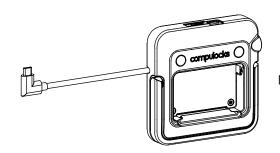

POWERMOVE CONNECTOR ASSEMBLY
IS READY FOR INSTALLATION. FOLLOW POWERMOVE
CONNECTOR ASSEMBLY INSTRUCTIONS

IN THE BOX














M3 X 5mm Torx Flat Head Screws


Pads

Alcohol Wipes


Assembly Instructions

Mounting Options




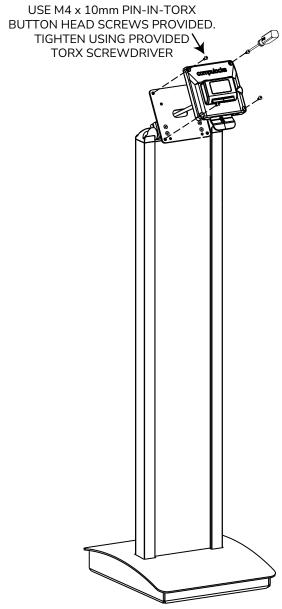


2 Counter Stand Mounting

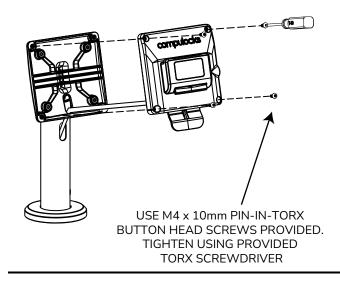


3 Wall Arm Mounting

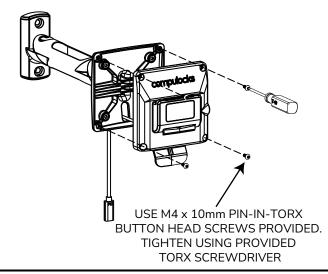

4 Direct Mounting To Wall

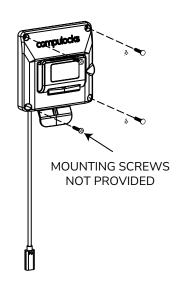

Optional Add-On: Portrait To Landscape Rotation Plate

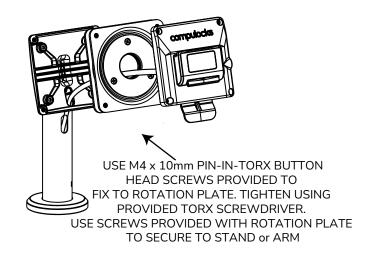



Assembly Instructions


Placing Tablet with Connector to Dock Station

1 2 3



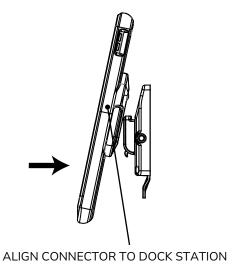


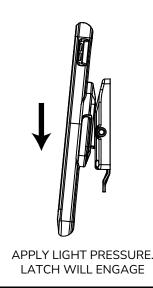


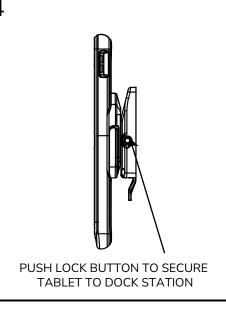



Removing Tablet with Connector from Dock Station

1 2 3 4

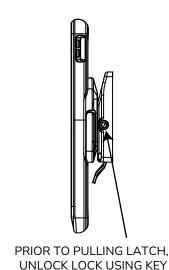

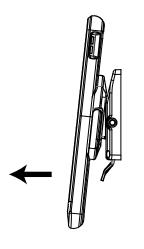

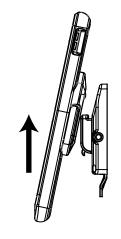




PULL LATCH FORWARD


GENTLY PULL UP TO RELEASE

COMPULOCKS

Tablet Charge PD Compatible

Tablet Data and Charge PD Compatible

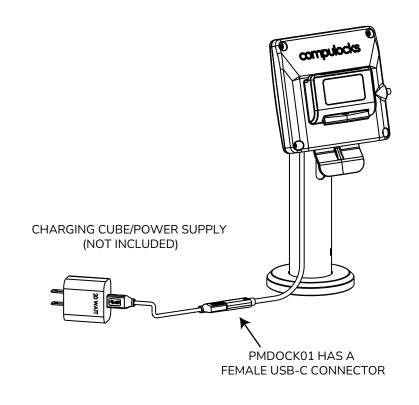


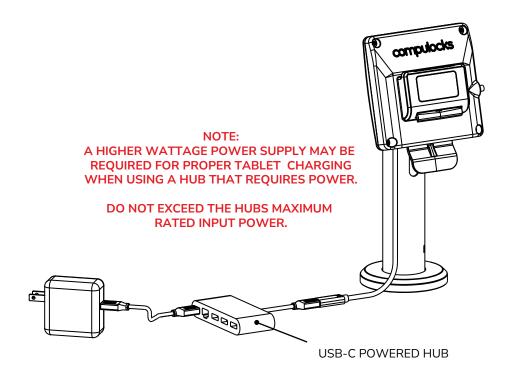





Keys Hardware Kit






PowerMove Dock Station


PowerMove Connector SKU: PMCON01

Assembly Instructions


COMPULOCKS

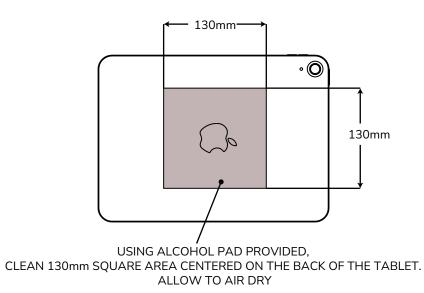


SELECT THE ORIENTATION OF THE CONNECTOR ON THE TABLET

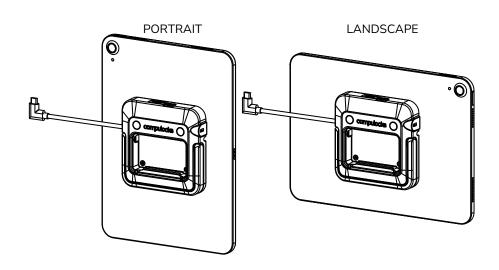

3

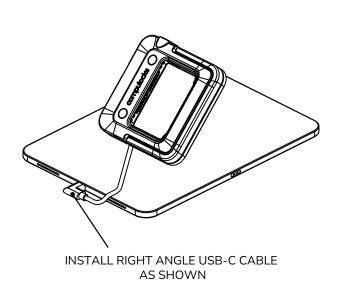


4

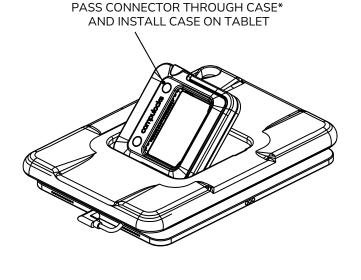


*CASE SOLD SEPARATELY

5 6

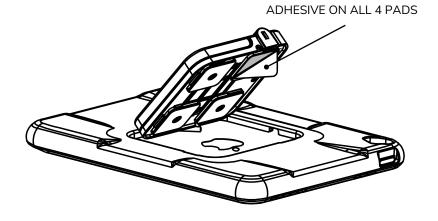



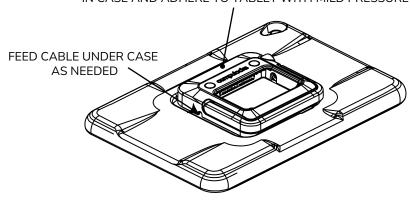

NOTE: TABLET AND CONNECTOR SHOULD BE AT ROOM TEMPERATURE FOR BEST RESULTS


FOR BEST PERFORMANCE ALLOW CONNECTOR TO BOND TO TABLET FOR 12 HOURS.

IN THE BOX





REMOVE COVERS TO EXPOSE




PowerMove Connector

COMPULICKS

Through Stand Cable Assembly

1

SCREW THE BOTTOM PLATE TO THE WALL / COUNTER WITH PHILLIPS ROUND HEAD SCREWS - TYPE 10 X 1 ½" (PROVIDED).

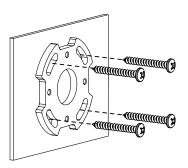

NOTE: IN A WOOD STUD INSTALATION ENSURE AT LEAST TWO VERTICALLY ALIGNED SCREWS ARE SECURED INTO THE STUD.

2


REMOVE FRONT COVER.

USE T-20 TORX


WRENCH (PROVIDED)

TO REMOVE M4 X 10mm

TORX FLAT HEAD SCREWS

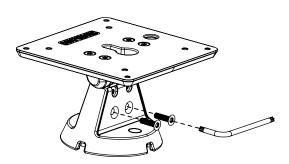


ROUTE CHARGING CABLE THROUGH MOUNT AS SHOWN

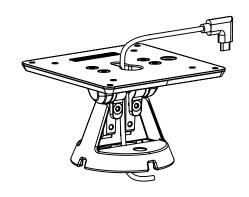


4

ROUTE CHARGING CABLE THROUGH MOUNT AS SHOWN

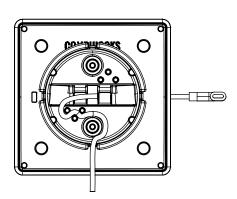

5


PLACE BOW MOUNT OVER BOTTOM PLATE
AND INSTALL USING 2 M4 X 10mm
TORX FLAT HEAD SCREWS AND WRENCH (PROVIDED).
INSTALL RUBBER PLUGS.

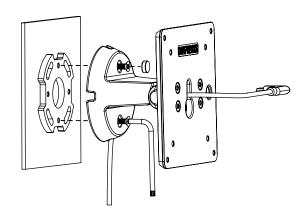


6

3


ROUTE CHARGING CABLE
THROUGH ENCLOSURE OR VESA MOUNT.
INSTALL TO MOUNT USING M4 X 8mm
PHILLIPS PAN HEAD SCREWS (PROVIDED)

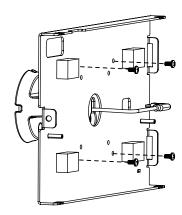

7

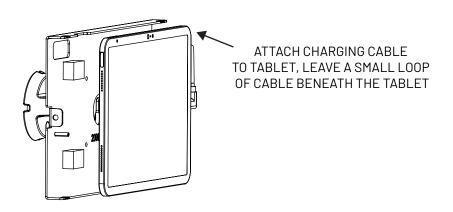


8

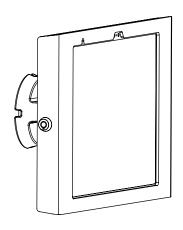

INSTALL THE REST OF THE ENCLOSURE OR VESA MOUNT PER THEIR INSTRUCTIONS

Tilt Tension Adjustments



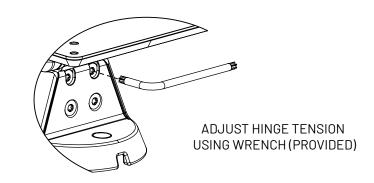

IN THE BOX



Bow Mount



Bottom Plate



Rubber Plugs



10 X 1 ½" Phillips Round Head Screw



M4 X 10mm Torx Flat Head Screw



M4 X 8mm Phillips Pan Head Screw



T20 TORX L-Wrench